

# Filter Dust & Leak Monitors

PROCESS & EMISSIONS MONITORING SYSTEMS



(shown: LEAK ALERT 80)

### SPECIFIC FEATURES:

- Range of leak and dust monitors for control and monitoring of arrestment plant, especially bagfilters
- Versions with European (TUV & MCERTS) approvals as 'filter dust monitors' and 'filter leak monitors' and meeting US Standards for Bagfilters (MACT)
- Selection of advanced features and options for improved performance, incl. automatic internal zero and reference self-checks for regulatory compliance



TUV APPROVED EN15859 MCERTS CLASS 2 &3 EQUIVALENT

US ASTM D7392-07





5/80

## TECHNOLOGY

#### SYSTEM DESCRIPTION

LEAK ALERT 75/80 instruments are particularly suited for use on fabric-filter type dust collectors (baghouses), and provide reliable and robust monitoring of particulate dust levels and leaks from faulty bag media. With compact, cost-effective transmitter design, reliable monitoring can now be provided for all types of industrial filters. The instruments benefit from ENVEA's unique *ElectroDynamic™* Probe Electrification technology and advanced features enabling configuration for all types of bag filters irrespective of cleaning sequence, including an external display, keypad and probe-rod self-check option, which provides added quality control. The Leak Alert sensors are approved and meet the requirements for Filter Dust Monitors and Filter Leak Monitors under EN15859 and also the US ASTM D7392-07 requirements for Bag-Leak Detectors, falling under MACT.

#### **PRINCIPLE OF OPERATION**

The instruments use ENVEA's unique and patented *ElectroDynamic*<sup>™</sup> Probe Electrification technology. The sensor electronics measures the current signature created by particles interacting with the grounded sensing rod which protrudes into the stack. The electronics extract a specific frequency band of this signal and filters out the DC current caused by particle collisions (unlike DC Triboelectric systems and 'induction sensing and protected probe' systems). Advantages from this technology are that the signal generated is:

- Unaffected by contamination on the sensor rod (which causes signal drift issues for other systems).
- Not affected by velocity variations within typical bag-filter velocity ranges (unlike other systems).
- Stable, reliable and does not drift due to electrostatic charging, which may occur with protected probe systems in dry flue gas applications.

In addition, *ElectroDynamic*<sup>™</sup> Probe Electrification technology provides sufficient dynamic range to follow 'on-line' and 'off-line' bag cleaning cycles for predictive filter failure and faulty bag leak-location detection.

#### Added Value Features

- An optimised frequency spectrum to extend the velocity range over which the system has no cross-sensitivity to changing velocity (see TUV approvals).
- Unique digital signal processing algorithms in the sensor give the wide dynamic range required for measurement accuracy during arrestment plant cleaning and high reproducibility of signal tracking.
- Uses the same technology as in ENVEA's Continuous Emission Monitors approved by TUV and MCERTS equivalent.

#### **ADDED FEATURES**

The Leak Alert 75/80 sensors provide powerful bag-leak detection capability based on the following standard features:

#### **Bag-leak monitoring performance**

- High-quality leak response with sufficient dynamic range and time response to track
- emissions from single and multi-compartment, pulse-cleaned bag filters.
- Instrument drift and minimum detection level below 0.1mg/m with leak monitoring to 500 mg/m.
- Fully configurable warning and limit alarm levels with independent alarm delay.
- Convenient bag-leak output range in defined units (user selectable).
- Bag-leak location capability by use of the optional Filter Display Module (FDM). Faulty bag media can be determined by row assisting bag replacement and reducing the cost of operating bag filters (application dependent, please consult your local ENVEA representative).

#### Designed for practical bag-filter issues

- Suitable for ATEX Dust zone 22 (with options for zones 20 and 21).
- Inbuilt surge protection to counter the effects of indirect lightning.
- Industrially hardened enclosure and sensor mechanics provide convenient connections to plant allowing armoured cable use.
- Powered directly from a mains power supply 100-240V AC (24V DC option).

#### **Powerful User Interface**

- Internal or external 4-digit display (external as standard on LEAK ALERT 80).
- Instrument setup via keypad or PC/laptop (requires the 'Device Set' software).
- Option for external keypad (standard on LEAK ALERT 80).
- Intuitive multi-level menu (User/Engineering setup) with password protection.
- Three tri-colour LEDs for Power, Emission alarms and instrument Self-checks.

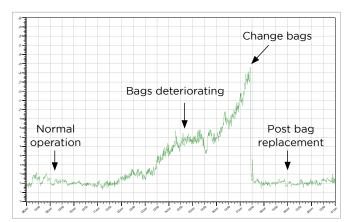


Figure 2: Cleaning pulses highlighting broken and leaking bags (source: PC-ME DUST TOOLS software)

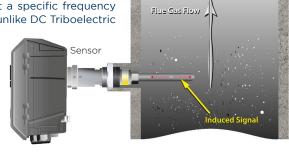


Figure 1: Principle of Operation – ElectroDynamic<sup>™</sup> sensors **ELECTRODYNAMIC<sup>™</sup>** 

## **PRODUCT FEATURES**

#### USER-SELECTABLE ADDED-VALUE OPTIONS

The Leak Alert 75/80 provides a full choice of user-selectable added-value features. These include the following options:



#### Automatic insulator Short-Circuit Check for contamination detection

*ElectroDynamic*<sup>™</sup> sensors are tolerant to dust contamination of the sensor rod (unlike Triboelectric systems) due to the non-contact measurement principle; however, build-up of conductive material across the insulator at the base of the rod can lead to error (as with all Probe Electrification systems). For standard, dry dust collector applications contamination is unlikely, but a possibility. The Short-Circuit Check provides a reliable method for detecting insulator contamination and hence improved Quality Assurance. For applications where water condensation is likely, ENVEA's patented insulated sensor is a preferred option.

#### Electronic Zero and Reference Drift detection

Signals are injected into the front end of the sensor electronics to ensure any electronic and signal measurement malfunction is automatically detected. This Quality Assurance feature is required by European and ASTM (US) performance standards for Filter Leak Monitors. This feature is controlled either manually or automatically (model specific).

Figure 3: LEAK ALERT sensor contamination check

#### • User Scaling of display

The LEAK ALERT sensors can be specified with a choice of two forms of user scaling providing assistance to plant personnel wishing to scale the display to an approximate known dust level (LEAK ALERT 80) or those wishing to display emissions relative to a 100% full scale (LEAK ALERT 75).

#### SENSOR SPECIFICATIONS

Feature	Specification
Ambient Temperature Range	-20°C to +50°C (-4°F to 122°F)
Sensor Variants	Standard sensor: 0-250°C (482°F) Insulated sensor: 0-250°C (482°F) High-temperature sensor: 0-400°C (752°F),
Sensor-to-Stack Connection	11/2" BSP
Enclosure Protection Rating	IP65 (with hinged lid closed)
Power Requirements	100-240VAC, 50/60Hz (32 mA) or 24V DC (300 mA)
Outputs (standard)	<ul> <li>Isolated 4-20mA (500 Ω)</li> <li>Warning alarm relay (SPST, 1A@24V DC), Fail safe</li> <li>Emission alarm relay (SPST, 1A@24V DC), Fail safe</li> </ul>
Outputs (optional)	<ul> <li>RS-232 (Modbus RTU)</li> <li>RS-485 (Modbus RTU)</li> </ul>
Inputs	Plant Stop signal (output set to zero when plant is off), marker for start of bag-cleaning sequence
External Indicators (3x LEDs)	<ol> <li>Power/sensor OK</li> <li>Warning and limit alarm</li> <li>Self-check status (optional)</li> </ol>
User Controls	4-digit Display and Setup buttons with menu-selectable items Option: external keypad (standard on LEAK ALERT 80)
Cable Entries	3x M20 cable glands
Air Purge	Air purge fitting: ¼″ BSP connection to instrument airline Requires external supply of 5-10 I/min of dry, clean, oil-free instrument air, depending on dust loading.

Note: Optional external keypad and display for all sensor types (excl. Ex variants), refer to the Sensor Options on page 4.

#### FILTER DISPLAY MODULE

The LEAK ALERT 75/80 may be upgraded to provide Leak Locate capability by connecting to a separate Filter Display Module (FDM). This enables plant operators to locate the position of failing bag rows in the dust collector, hence reducing bag-replacement costs and minimising time diagnosing dust collector faults.

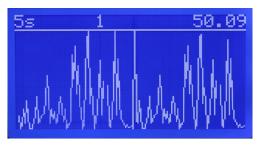


Figure 4: Large Pulse Display permits failing bag rows to be identified during bag cleaning (see FDM, right)



www.envea.global

# SPECIFICATIONS

### DIMENSIONS

#### Leak Alert Sensor (shown with optional external display and keypad)

ШШ 8


### **Duct Connection**






250°C Insulated 106 mm

199 <u>mm</u>

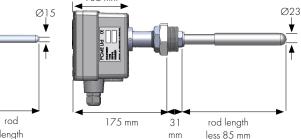

400°C Stainless Steel

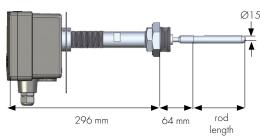

50 mm

11/2" BSP

Ø45 mm

## LEAK ALERT 75/80

**ORDER CODES** 

#### INSTRUMENT TYPE: 80 FILTER DUST MONITOR 75 FILTER LEAK MONITOR

#### Mechanical Options (1-5) Stack up to 250°C standard 250C 1 400C Temperature up to 400°C\* option 0100\*-0500 mm (standard) 2 Rod Length 0600, 0800, 1000 mm specify RODxxxx (option) Stainless steel standard S 3 Rod Material Insulated (PTFE) option T none 0 Air Purge Fitting 4 Air Purge option AP 2" Flanged Air Purge Fitting option S250 (250°C) Air Filter/ 0 none 5 Filter + Regulator assembly REG Regulator option

## PC Software Options (PC-ME DUST TOOLS)

Configuration Options	Device Set	
Real-time Data Options	Online	Predict (req. Online)

\*not available with insulated rod option \*\* standard on LEAK ALERT 80 sensors \* choose F or G (these options are exclusive; note that option P requires option F)

Note: For details on options and order information please refer to the order form for this instrument (available from your local ENVEA representative on request).

Example: SEN80 –	250C	ROD0800	- I	AP	REG	0	MAN	SF	0	24DC	232	0	FLY	EK	ED	

### **ABOUT ENVEA**

As a progressive environmental Company, ENVEA specialises in particulate measurement for industrial processes. With a worldwide reputation for reliability, innovation and technological excellence, the Company produces under the trademark envea™ equipment for concentration and mass monitoring for regulatory, environmental and process control requirements. A dedicated team of qualified application and sales engineers is always on hand and should be consulted in the selection and usage of the most suitable equipment for any particulate application.



ENVEA UK ENVEA House Rose and Crown Road Swavesey / Cambridge - UK CB24 4RB **\*** +44 (0)1480 468200 🗠 contact.gb@envea.global





Ø45 mm

#### Sensor Features and Accessories (A-J, P)

А	Sensor Self-checks	none Short-circuit Check	– option	0 SC
в	Electronic Drift	Manual	standard	MAN
	Checks	Automatic	option	AUTO
с	Scaling Method	Trending 0-100% Scaling Factor	standard 75 option**	% SF
D	Hazardous Zone Classification*	not required ATEX Dust zone 22 ATEX Dust zone 20/21 (250°C) IECEx Dust zone 22 IECEx Dust zone 20/21 (250°C)	- option option option	0 X22 X20 I22 I20
E	Power Supply	100-240V AC (non-Ex only)	—	AC
	Voltage	24V DC (no cost option)	option	24DC
F	RS-485 Data	not included	–	0
	Output	RS-485 included***	option	485
G	RS-232 Data	not included	—	0
	Output	RS232 included***	option	232
н	External Connector	Internal connector	standard	0
	for RS-232	External connector (non-Ex only)	option	FLY
I	Keypad	Internal keypad External keypad**	standard 75 option 75	IK EK
J	Display	Externally viewable	standard	ED
Ρ	Leak-Locate	not included	—	0
	Capabilities	Filter Display Module (req. F)***	option	BPD

0