

Model OA-1 Portable Trace Oxygen Analyzer



Lightweight, durable, fast, for high purity applications requiring ppm measurement

DESCRIPTION



The MSA OA-1, powered by Neutronics Technology, is a portable analyzer that accurately measures oxygen in the range of 0.1 ppm to 100%. Featuring the rapid response zirconium oxide sensor with its extremely fast response and high accuracy, the Model OA-1 can be exposed to air and within seconds read ppm oxygen in a variety of background gases, including nitrogen, argon, and helium. The OA-1 is designed to measure oxygen concentrations in clean gases that do not contain hydrocarbons or carbon monoxide.

Features

PPM to 100% measurement range

Rapid-response Neutronics zirconium oxide sensor

Suitable for a wide range of operating gas temperatures

Less than 15 seconds from air to 50 ppm

5 year sensor life with no regular service required

Critical to reliable performance and rapid response, the Model OA-1 includes a precision controlled sensor heater assembly designed to maintain the temperature of the sensor at 650°C by continuously modulating the VAC electrical power input. To meet strict heat loss requirements, the sensor heater housing utilizes high temperature microporous insulation, a low density material.

The Model OA-1 is a completely self-contained instrument that is unaffected by position or motion. The unit is ideally suited for process pressures ranging from 10 to 20 psig. The internal sampling system includes a pressure release bypass valve that controls the system back pressure and a series of fixed orifices that control the sample flow at a rate of 0.5 to 3 slpm to the sensor. Gas released by the bypass valve exhausts through the bypass exhaust fitting, while the sample gas stream is discharged through a separate sensor exhaust fitting.

The analyzer has an audible alarm system that also controls contact closures that integrate this alarm function into the user's process control system. The OA-1 provides the flexibility to set the alarms for high/low, high/higher, or low/lower as required. The user can change the alarm values and turn the alarms on or off. Relay contacts are located on the back panel.

A large three-digit LED display shows the temperature and oxygen content. When the oxygen content is displayed, the analyzer automatically switches to the proper range and illuminates one of the range indicators, showing either ppm or percent. The smaller secondary display is used to guide the user through a variety of diagnostics and operation modes.

The electronics have been designed for communication with a host controller through a standard RS-232 interface. The host computer can inquire about temperature, oxygen concentration, sensor voltage, and alarm points. Two analog outputs are available: 4-20mA and 0-1VDC.

The range values for the OA-1 are typically set to auto-range. However, the user has the option to disable the auto-range feature and set the range as needed for a specific application.



MORE INFORMATION:

Scan the QR code to learn more about the Model OA-1 Portable Trace Oxygen Analyzer and other MSA products.


Description	Part Number
Model OA-1	C7-01-1000-15-1

Model OA-1 Portable Trace Oxygen Analyzer




Specifications	Description
Type	Portable trace analyzer
Operating range	Auto-ranging between 0.1ppm to 100% oxygen. Operator does not need to Select the range. An indicator light shows whether the reading is in ppm or percent.
Sensor type	Rapid response zirconium oxide, ZR-100
Expected sensor service life	>5 years
Accuracy	1 to 100 ppm $\pm$ 5.0% of reading, 101 to 999 ppm $\pm$ 2.0% of reading, 0.1 to 99.9% $\pm$ 2.0% of reading
Response time (step change)	T95 < 3 seconds at 1 liter/min sample flow rate T90 < 5 seconds below 999 ppm
Sample pressure	10 to 20 psig
Sample flow rate	0.5 to 3.0 liters/minute
	90 to 264 VAC, 50/60 Hz or 24 VDC
Recovery time	< 5 seconds from room air to 0.1%, < 5 minutes from room air to 1 ppm, < 15 seconds from room air to 50 ppm
Relative humidity	0 to 90%, non-condensing
Operating temperature	32° to 122° F (0° to 50° C)
Power supply	110/220 VAC $\pm$ 20%, 50/60 Hz (power cord included)
Display	3-digit LED digital display of O ₂ concentration, dot matrix diagnostics display
Signal interface	RS-232 serial port, 0-1V $\pm$ 0.5% analog output 4-20mA analog output
Relay outputs	Two dry contacts available, 5A, 220VAC rated
Warranty	12 months from date of shipment
Dimensions	13.55" (344mm) length x 9.00" (229mm) width x 9.15" (232mm) height
Ratings	Faceplate: NEMA 4 (IP66)
Sampling system MOC	316 SS fittings and tubing
Weight	8.5 lbs. (3.9 Kg)


Specifications are subject to change without notice.

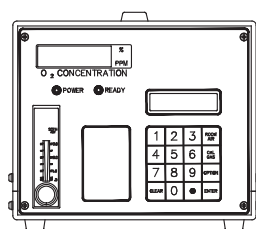

Front view

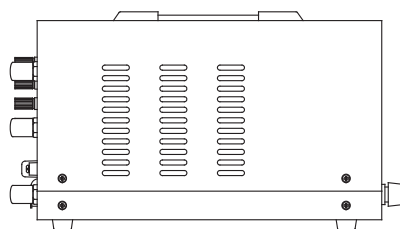

Side view

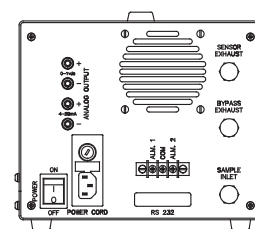

Rear view

Note: This Bulletin contains only a general description of the products shown. While product uses and performance capabilities are generally described, the products shall not, under any circumstances, be used by untrained or unqualified individuals. The products shall not be used until the product instructions/user manual, which contains detailed information concerning the proper use and care of the products, including any warnings or cautions, have been thoroughly read and understood. Specifications are subject to change without prior notice. MSA is a registered trademark of MSA Technology, LLC in the US, Europe, and other Countries. For all other trademarks visit <https://us.msasafety.com/Trademarks>.

MSA operates in over 40 countries worldwide. To find an MSA office near you, please visit [MSAsafety.com/offices](https://us.msasafety.com/offices).