

Model OA-1S+ Portable Trace Oxygen Analyzer



Lightweight, durable, fast, for high purity applications requiring ppm measurement

DESCRIPTION



The MSA OA-1S+, powered by Neutronics Technology, is a portable analyzer that accurately measures oxygen in the range of 75 ppb to 100%. Featuring the rapid response zirconium oxide sensor with its extremely fast response and high accuracy, the Model OA-1S+ can be exposed to air and quickly read ppb oxygen in a variety of background gases, including nitrogen, argon, and helium. The OA-1S+ is designed to measure oxygen concentrations in clean gases that do not contain hydrocarbons or carbon monoxide.

Features

PPB to 100% measurement range

Rapid-response Neutronics zirconium oxide sensor

Electropolished SS tubing and orbital welded fittings

Unaffected by position or motion

- 5 year sensor life with no regular service required

Critical to reliable performance and rapid response, the Model OA-1S+ includes a precision controlled sensor heater assembly designed to maintain the temperature of the sensor at 650°C by continuously modulating the VAC electrical power input. To meet strict heat loss requirements, the sensor heater housing utilizes high temperature microporous insulation, a low density material with an extremely low thermal conductivity. The Model OA-1S+ is a completely self-contained instrument that is unaffected by position or motion. The unit is ideally suited for regulated process pressures ranging from 25 to 60 psig. A pressure regulator must be installed in the inlet line if sample pressures outside this range are expected.

The internal sampling system includes electropolished 316SS tubing and orbital welded VCR fittings. A pressure relief bypass valve controls the system back pressure, and a series of fixed orifices control the sample flow at a rate of 1.0 to 5.0 slpm to the sensor. Two diaphragm sampling valves maintain trace levels of oxygen within the sensor loop. This feature enhances the analyzer's ability to read trace levels after disconnecting, moving, and reconnecting it at multiple measurement points.

The analyzer has an audible alarm system that controls contact closures that integrate the alarm function into the user's process control system. The OA-1S+ provides the flexibility to set the alarms for high/low, high/higher, or low/lower as required. The user can change the alarm values and turn the alarms on or off. Relay contacts are located on the back panel. The OA-1S+ includes a large three-digit LED display for showing the temperature and oxygen content. When the oxygen content is displayed, the analyzer automatically switches to the proper range and illuminates one of the range indicators, showing either ppb, ppm, or percent. The smaller secondary display is used to guide the user through a variety of modes of operation and diagnostics.

Description	Part Number
Model OA-1S+	C7-01-1000-21-1



MORE INFORMATION:


Scan the QR code to learn more about the Model OA-1S+ Portable Trace Oxygen Analyzer and other MSA products.

Model OA-1S+ Portable Trace Oxygen Analyzer




Specifications	Description
Type	Portable trace analyzer
Operating range	Auto-ranging from 75 ppb to 100% O ₂ . An indicator light shows whether the reading is in ppb, ppm, or percent.
Sensor type	Neutronics rapid response zirconium oxide, ZR-100
Expected sensor service life	>5 years
Accuracy	75 to 100 ppb $\pm$ 5.0% of reading @ up to 100 ppb 101 to 999 ppb $\pm$ 2.0% of reading 1000 ppb to 99.9% $\pm$ 2.0% of reading
Response time (step change)	T90 < 5 seconds at 1 liter/minute sample flow rate
Sample pressure	25 to 60 psig
Sample flow rate	1 to 5 standard liters/minute
Warm up time	20 minutes
Recovery time	< 5 seconds from room air to 0.1% < 5 minutes from room air to 1 ppm < 30 minutes from room air to 50 ppb
Relative humidity	0 to 90%, non-condensing
Operating temperature	32 to 122° F (0 to 50° C)
Power supply	110/220 VAC $\pm$ 20%, 50/60 Hz (power cord included)
Display	3-digit LED digital display of O ₂ concentration, dot matrix diagnostics display
Signal interface	RS-232 serial port, 0-1V $\pm$ 0.5% analog output, 4-20mA analog output
Relay outputs	Two available, 5A, 220VAC rated
Warranty	12 months from date of shipment
Dimensions	13.55" (344mm) length x 9.00" (229mm) width x 9.15" (232mm) height
Ratings	Faceplate: NEMA 4 (IP66)
Sampling system MOC	316 SS electropolished fittings and tubing with VCR connections
Weight	8.5 lbs. (3.9 Kg)


Specifications are subject to change without notice.

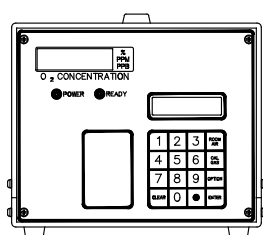

Front view

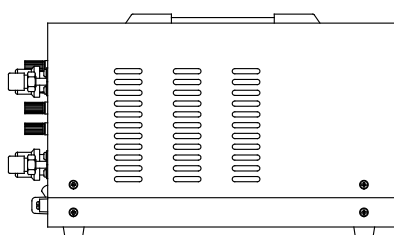

Side view

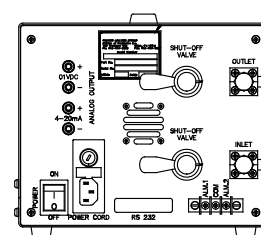

Rear view

Note: This Bulletin contains only a general description of the products shown. While product uses and performance capabilities are generally described, the products shall not, under any circumstances, be used by untrained or unqualified individuals. The products shall not be used until the product instructions/user manual, which contains detailed information concerning the proper use and care of the products, including any warnings or cautions, have been thoroughly read and understood. Specifications are subject to change without prior notice. MSA is a registered trademark of MSA Technology, LLC in the US, Europe, and other Countries. For all other trademarks visit <https://us.msasafety.com/Trademarks>.

MSA operates in over 40 countries worldwide. To find an MSA office near you, please visit [MSAsafety.com/offices](https://us.msasafety.com/offices).