

RAELink3 2.4GHz

Wireless Modem for AreaRAE Plus and Pro

The RAELink3 2.4GHz modem allows integration of AreaRAE Plus and Pro monitors with ProRAE Guardian software. An AreaRAE Plus or Pro linked with a RAELink3 2.4GHz modem can communicate sensor data to a command center's PC running ProRAE Guardian software up to 1.2 miles (2km) away. One RAElink3 2.4GHz can connect up to 64 AreaRAE Plus and/or AreaRAE Pro monitors using ProRAE Guardian system.

Key Features

Integrated

- Long-range radio to transmit system information up to 1.2 miles (2km) in urban settings

Versatile

- Easily configure in the field to interface with other ProRAE Guardian networked monitors
- Programmable as a host modem and repeater modem as needed

Easy to Use

- Backlit display with intuitive interface
- Radio strength indicator on LCD

Durable

- Weatherproof
- Shock-resistant
- Up to 18 hours run time on a single charge



APPLICATIONS

- Incident Response
- Venue Protection
- Industrial Safety
- Perimeter Monitoring
- Confined Space Entry
- Pulp and Paper Industry
- Plant Turnarounds
- Marine and Offshore Wells
- View and track sensors and responders downrange
- Deploy AreaRAE Plus and Pro quickly and easily
- Merge multiple detection technologies on one viewing platform



RAELink3 2.4GHz

Wireless Modem for AreaRAE Plus and Pro

SPECIFICATIONS	
Size	4.73" L x 3.4" W x 1.85" H (12cm x 8.65cm x 4.7cm) without antenna
Weight	17.3 oz (490 g)
Battery	Rechargeable, 7.4V/1650mAh, Lithium-ion external battery pack with charging station (6-hour charging time), and alkaline adapter (5 x AA)
External Power Supply	12VDC 500mA
Operating Hours	Up to 18 hours continuous operation on a charge
Operating Temperature	-4° to 131° F (-20° to +55° C)
Humidity	0% to 95% relative humidity (non-condensing)
IP Rating	IP-65
Peak RF Power	500mW (+27dBm) North America 100mW (20dBm) EU
Range	Up to 1.2 miles (2km)
Interface	RS-232
Keypad	Three operation and programming keys
Display	LCD, 128 X 64
Safety Certifications	Class I, Division 2 Groups A, B, C, D T4
Wireless Frequency	ISM license-free band 2.4GHz
Wireless Approvals	FCC Part 15, Others ¹
Radio Module	Supports Bluetooth 2.0


¹ Contact RAE Systems for country-specific wireless approvals and certificates. Specifications are subject to change.



**ProRAE
Guardian**



RAE Link3 2.4 GHz Host

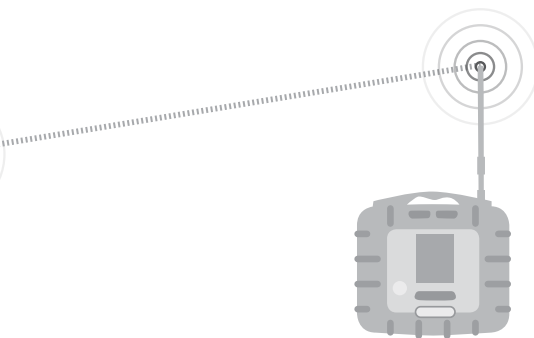

AreaRAE Plus / Pro

Europe, Middle East, Africa

Life Safety Distribution GmbH
Tel: 00800 333 222 44 (Freephone number)
Tel: +41 44 943 4380 (Alternative number)
Middle East Tel: +971 4 450 5800 (Fixed Gas Detection)
Middle East Tel: +971 4 450 5852 (Portable Gas Detection)

Americas

Honeywell Analytics Distribution Inc.
Tel: +1 847 955 8200
Toll free: +1 800 538 0363
RAE Systems by Honeywell
Phone: 408 952 8200
Toll free: 1 888 723 4800

Asia Pacific

Honeywell Industrial Safety
Tel: +82 (0) 2 6909 0300
India Tel: +91 124 4752700
China Tel: +86 10 5885 8788 3000
analytics.ap@honeywell.com

Technical Services

EMEA: HAexpert@honeywell.com
US: ha.us.service@honeywell.com
AP: ha.ap.service@honeywell.com

Datasheet_RAELink3 24 GHz_DS01185_01
© 2017 Honeywell Analytics

RAELink3 2.4GHz Communication Kits

RAELink3 2.4GHz Communication Kit enables communication between a variety of RAE Systems wireless monitors and ProRAE Guardian. Custom RAE Link3 2.4GHz Communication Kits are also available for select third-party devices. Check the RAE Systems web site for the latest listing of compatible third-party devices.

RAE Systems-Compatible Monitors

- AreaRAE Plus and Pro

RAELink3 Communication Kit Includes:

- RAE Link3 modem equipped with GPS, Bluetooth, and long-range radio
- Rugged antenna
- Charging adapter and AC/DC adapter
- Alkaline battery pack
- Hard transport case
- Quick reference guide and resource CD
- RS-232 cable

Ordering Information

RAELink3 2.4GHz Modem

029-0607-000

Contact RAE Systems for other frequency options.

Honeywell