



Fixed Gas Monitors

# Gas Transmitter Series MGS-150



**Ideal for Commercial and Industrial Refrigeration, Food Storage and Food Processing Facilities, Supermarkets, Parking Garages, Wastewater Treatment Facilities, Hospitals and Universities.**

## Features & Benefits:

- Infrared, semiconductor and electrochemical sensor options to meet almost any gas detection need - at the most affordable cost.
- User-selectable analog outputs: 4-20 mA, 0-5V, 0-10V, 1-5V, 2-10V featuring 12/24 VAC/VDC operation
- Fast-response sensors detect leaks quickly, which protect personnel and minimize refrigerant gas usage and environmental impact.
- Long-life semiconductor sensors for detection of all refrigerants, ammonia, halocarbons, combustible gases & VOCs
- Robust design and remote sensor options allow units to be placed directly in areas where detection is needed.
- Available in a variety of housings, including IP66 and duct mount, for placement in the toughest of environments.



**MGS  
Standard  
Housing**

## Continuous Monitoring For Most Types of Gases

Bacharach's MGS-150 Series Gas Transmitter is a feature-rich gas detection system with a wide range of sensor options to provide real-time monitoring of refrigerant, combustible, and toxic gases. It comes standard with user-selectable analog and digital outputs that can be set for 4-20 mA, 0-5V, 1-5V, 0-10V, or 2-10V; allowing them to connect directly to most BMS, SCADA or control systems. Alarm indicators include an onboard alarm LED and audible buzzer, in addition to an alarm relay for connection to external audible/visual alarms or a BMS system.

The product's alarm threshold value is pre-set to factory defaults but is also field programmable. A variety of housing options are available (shown below), from standard IP41 enclosures to IP66 water resistant housings, which allow the MGS-150 Series gas sensors to be placed in the toughest of conditions.



**MGS  
Controller**

**IP66  
Housing**



**Airflow /  
Duct Mount**



**IP66 with  
Splash Guard**



**IP66 with  
Remote Head**



**IP66 with Exd  
Remote Head**



**IP66 with  
PRV**



**Exd  
(ATEX only)**



## MGS-150 Technical Specifications

<b>Power Supply:</b>	12/24 VAC/VDC operation
<b>Power Consumption (12V):</b>	NDIR: 140 mA • SC: 160 mA • EC: 60 mA
<b>Power Monitoring:</b>	Green LED
<b>Visual Alarm:</b>	Red LED
<b>Audible Alarm:</b>	Buzzer, enabled/disabled
<b>Fault Monitoring:</b>	Red LED (On) • Green LED (Off)
<b>Fault States:</b>	0-1 V / 0-2 mA outputs
<b>Analog Outputs:</b>	4-20 mA, 0-5 V, 0-10 V, 1-5 V, 2-10 V
<b>Relay Output (Volt-free):</b>	1 relay, 1 amp 24 VAC/VDC
<b>Alarm Delay:</b>	Selectable: 0, 1, 5 or 10 minutes
<b>IP Rating:</b>	IP41 (standard) • IP66 (optional)
<b>Dimensions &amp; Weight - enclosures types:</b>	Standard 3.35"x5.59"x2.09" • 6.3oz. IP41: 86 x 142 x 53mm • 180g
	IP66: 6.89"x6.5"x3.29" • 1lb. 6oz. 175 x 165 x 82mm • 629g
	IP66 w/Splash: 6.89"x8.9"x3.29" • 1lb. 8.7oz. 175 x 225 x 82mm • 700g
	IP66 / Remote: 6.89"x6.1"x3.29" • 1lb. 11oz. 175 x 155 x 82mm • 790g
	IP66 / EXd: 6.89"x6.1"x3.29" • 2lb. 10oz. 175 x 155 x 82mm • 1185g
	PRV / IP66: 6.89"x6.1"x3.29" • 2lb. 0.3oz. 175 x 155 x 82mm • 916g
	Airflow / Duct: 6.89"x4.9"x3.29" • 1lb. 4oz. 175 x 125 x 82mm • 578g
	EXd (ATEX only): 5.12"x6.3"x3.54" • 9lb. 4oz. 130 x 160 x 90mm • 4200g
<b>Approvals:</b>	CE • IEC 61010 (pending) • EXd • UL CSA (pending)

## MGS-150 Ordering Information

### Infrared (NDIR) Sensor - Common Configurations

<b>6300-1090</b>	CO <sub>2</sub> IR: 0 - 5,000 ppm • Standard Housing
<b>6300-8091</b>	CO <sub>2</sub> IR: 0 - 10,000 ppm • Duct Mount
<b>6300-2051</b>	Combustibles IR: 0 - 100% LEL • IP66 Housing

### Semiconductor (SC) Sensor - Common Configurations

<b>6300-7118</b>	NH <sub>3</sub> : 0 - 10,000 ppm • IP66 w/PRV Sensor
<b>6300-4101</b>	R134a: 0 - 1,000 ppm • IP66 w/Remote Sensor
<b>6300-1105</b>	R407a: 0 - 1,000 ppm • Standard Housing
<b>6300-4107</b>	R410a: 0 - 1,000 ppm • IP66 w/Remote Sensor

### Electrochemical (EC) Sensor - Common Configurations


<b>6300-1018</b>	CO: Parking Garage • Standard Housing
<b>6300-2018</b>	CO: Parking Garage • IP66 Housing
<b>6300-3031</b>	NH <sub>3</sub> : 0 - 500 ppm • IP66 w/Splash Guard
<b>6300-4030</b>	NH <sub>3</sub> : 0 - 100 ppm • IP66 w/Remote Sensor
<b>6300-2001</b>	CO: 0 - 1,000 ppm • IP66 Housing
<b>6300-1019</b>	NO <sub>2</sub> : Parking Garage • Standard Housing
<b>6300-2019</b>	NO <sub>2</sub> : Parking Garage • IP66 Housing
<b>6300-2015</b>	O <sub>3</sub> : 0-2 ppm • IP66 Housing

Please contact your Bacharach sales representative for other configurations based on your unique specifications.

## MGS-150 Sensor Information

	Infrared (NDIR)	Semiconductor (SC)	Electrochemical (EC)
<b>Temperature Range:</b>	-4° F to 122° F (Stand. housing) -20° C to 50° C (Stand. housing) -40° F to 122° F (IP66 housing) -40° C to 50° C (IP66 housing)	-4° F to 122° F (Stand. housing) -20° C to 50° C (Stand. housing) -40° F to 122° F (IP66 housing) -40° C to 50° C (IP66 housing)	-4° F to 122° F (Stand. housing) -20° C to 50° C (Stand. housing) -40° F to 122° F (IP66 housing) -40° C to 50° C (IP66 housing)
<b>Humidity (non-condensing):</b>	0 - 95%	0 - 95%	0 - 95%
<b>Sensor Life:</b>	8 years, typical	5 - 8 years, typical	2 - 5 years, typical
<b>Time to Alarm (T50):</b>	25 seconds, typical	20 seconds, typical	80 seconds, typical
<b>Time to Alarm (T90):</b>	90 seconds, typical	50 seconds, typical	220 seconds, typical
<b>Recovery Time:</b>	210 seconds, typical	900 seconds, typical	600 seconds, typical
<b>Infrared (NDIR) Sensor</b>	<b>Gas(es) Detected</b>	<b>Measuring Range(s)</b>	
	Carbon Dioxide (CO <sub>2</sub> )	0 - 1,000 ppm 0 - 2,000 ppm 0 - 5,000 ppm 0 - 10,000 ppm (0-1% vol.) 0 - 20,000 ppm (0-2% vol.) 0 - 5%, 0 - 10%	
	Hydrocarbons (Methane, propane, etc.)	0 - 100% LEL, 0 - 100% vol.	
<b>Semiconductor Sensor</b>	<b>Gas(es) Detected</b>	<b>Measuring Range(s)</b>	
	<b>Refrigerants - HFCs:</b> (R134a, R404a, R407, R410a, & many more)	0 - 1,000 ppm	
	<b>Refrigerants - HFCs:</b> (R22 & more)	0 - 1,000 ppm	
	<b>Refrigerants - CFCs</b> (R11, R12 & more)	0 - 1,000 ppm	
	Ammonia (NH <sub>3</sub> )	0 - 10,000 ppm	
	Hydrogen (H <sub>2</sub> )	0 - 2,000 ppm	
	<b>Hydrocarbons:</b> Methane (natural gas), Propane, Butane, LPG, Ethylene, Isobutane	0 - 2,000 ppm	
	<b>VOCs:</b> Acetone, Ethanol, Methanol, Trichloro-ethylene and more	0 - 2,000 ppm	
<b>Electrochemical Sensor</b>	<b>Gas(es) Detected</b>	<b>Measuring Range(s)</b>	
	Ammonia (NH <sub>3</sub> )	0 - 100 ppm • 0 - 500 ppm • 0 - 1,000 ppm • 0 - 5,000 ppm	
	Carbon Monoxide (CO)	0 - 100 ppm • 0 - 500 ppm • 0 - 1,000 ppm	
	Chlorine (Cl <sub>2</sub> )	0 - 20 ppm	
	Chlorine Dioxide (ClO <sub>2</sub> )	0 - 1 ppm	
	Ethylene Oxide (C <sub>2</sub> H <sub>4</sub> O)	0 - 20 ppm	
	Ethylene (C <sub>2</sub> H <sub>4</sub> )	0 - 20 ppm • 0 - 1,000 ppm	
	Fluorine (F <sub>2</sub> )	0 - 1 ppm	
	Hydrazine (N <sub>2</sub> H <sub>2</sub> )	0 - 1 ppm	
	Saline - Hydride (SiH <sub>4</sub> )	0 - 5 ppm	
	Hydrogen (H <sub>2</sub> )	0 - 1,000 ppm	
	Hydrogen Chloride (HCl)	0 - 50 ppm	
	Hydrogen Cyanide (HCN)	0 - 50 ppm	
	Hydrogen Sulfide (H <sub>2</sub> S)	0 - 30 ppm • 0 - 200 ppm	
	Nitric Oxide (NO)	0 - 100 ppm • 0 - 1,000 ppm	
	Nitrogen Dioxide (NO <sub>2</sub> )	0 - 10 ppm	
	Oxygen (O <sub>2</sub> )	0 - 30% vol.	
	Ozone (O <sub>3</sub> )	0 - 2 ppm	
	Phosgene (COCl <sub>2</sub> )	0 - 1 ppm	
	Phosphine (PH <sub>3</sub> )	0 - 5 ppm	
	Sulfur Dioxide (SO <sub>2</sub> )	0 - 100 ppm	

Distributed By:

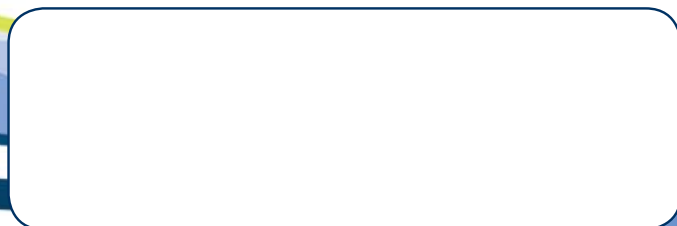

BACHARACH IS A U.S. BASED MANUFACTURER

Bacharach® is a registered trademark of Bacharach, Inc.  
All rights reserved. All information is subject to verification.  
October 2011 - Rev. 0 Printed in USA



ISO 9001:2008